


OPERATING CONTROLLER

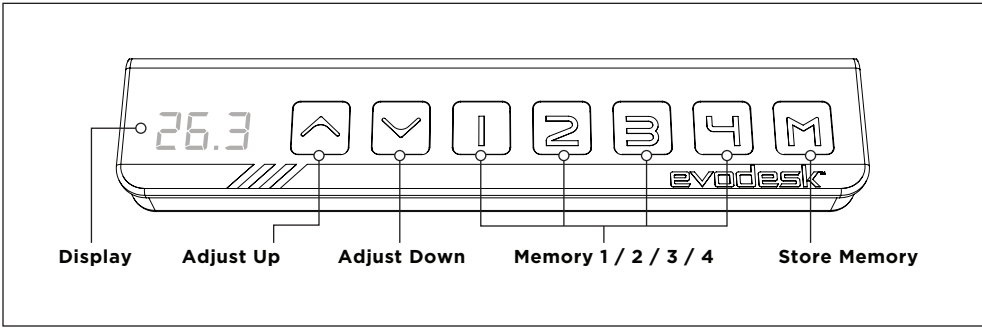

UP AND DOWN

Press either the up or down button and the desk will move until the button is released again or the system reaches end position.

STORE MEMORY PRESENTS

- A.** Raise or lower the desk to the height you wish to store as a preset.
- B.** Press and release the (M) button.
- C.** Within five seconds press a desired memory button (1,2,3,4) the panel will acknowledge by showing "S - (chosen number)" in the display.

USING MEMORY PRESENTS

Press and release of the memory buttons and the system will start moving to the pre-programmed memory position.

evodesk™

2251 Picadilly Drive
Suite. C-341
Austin, TX 78660
(888) 615-5721

evodesk.com

For technical support visit **evodesk.com/support**