
CABLE MANAGEMENT TRAY INSTALLATION



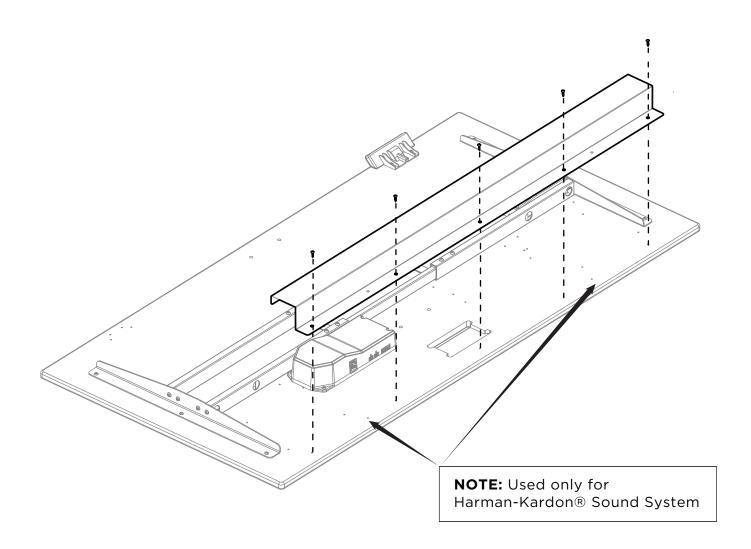

CAUTION: DO NOT use screws longer than ½" as damage may occur.



Phillips Wood Screws #6 x ½"

x5

Align the Cable Management Tray with the five pre-drilled holes located on the underside of the desktop. Using the five (5) included Phillips Wood Screws #6 \times secure to the desktop.



NOTE: For customer supplied desktops, A pilot hole may be required.